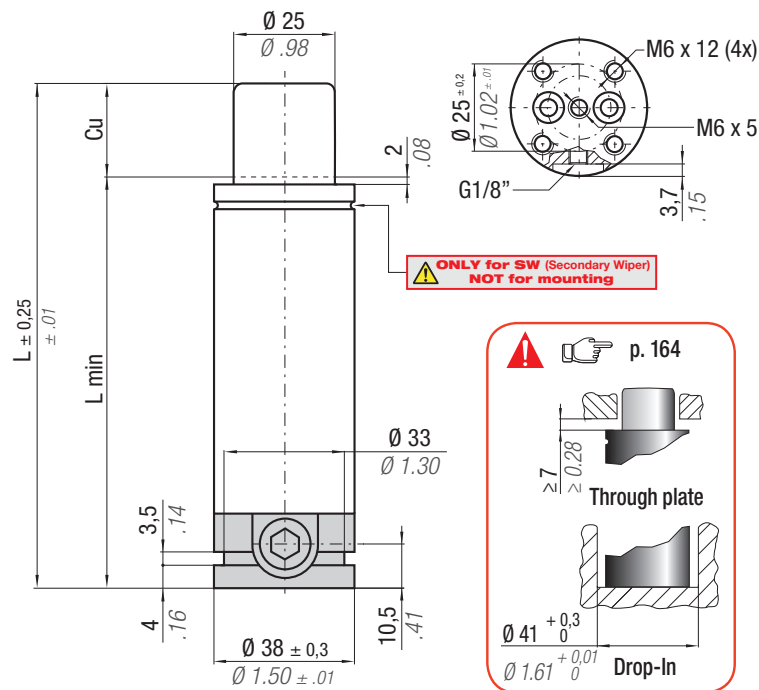


ML 1000 N
 linkable G1/8"


Il nuovo codice sarà fornito solo ad esaurimento del vecchio

The new code will be supplied only when the old will be out of stock

Der neue Kode wird geliefert nur wenn der alte nicht mehr im Lager ist

Le nouveau code sera fourni uniquement lorsque le vieux stock sera écoulé

El nuevo código será suministrado sólo cuando el viejo está fuera de stock

O novo código irá ser fornecido apenas quando o antigo esgotar stock

 * $F_{1i} =$

 Isothermal
end force
at 100% Cu


p. 18

 ** $F_{1p} =$

 Polytropic
end force
at 100% Cu


SW

**ACTIVE
SAFETY**


OSAS



USAS



OPAS

 N2		°F 32 176	 °C 0 80	ΔP ± 0,33 %/°C	P max 200 bar 2900 psi	P min 20 bar 290 psi	S 4,91 cm² 0.761 in²	SPM ~ 40 - 80 (at 20°C)	Max Speed 1,6 m/s	Maintenance kit 39BMML01000C								
CODE PHASING OUT from 05/2019	 NEW	Cu		L		L min		F0 Initial force		F1i * End force		F1p ** End force		Vo			 2014/68/EU	
		mm	inch	mm	inch	mm	inch	daN	lb	daN	lb	daN	lb	cm³	in³	~Kg	~lb	
ML1000-010-C-N	ML1000-010-D-N	10	0.39	95	3.74	85	3.35	980 ± 5%	2203	1371	3081	1542	3467	22,0	1.34	0,52	1.15	✓
ML1000-015-C-N	ML1000-015-D-N	15	0.59	105	4.13	90	3.54			1500	3372	1719	3864	27,0	1.65	0,55	1.21	✓
ML1000-025-C-N	ML1000-025-D-N	25	0.98	125	4.92	100	3.94			1687	3793	1981	4453	36,0	2.20	0,60	1.32	✓
ML1000-038-C-N	ML1000-038-D-N	38	1.50	155	6.10	117	4.61	200 bar 2900 psi		1768	3974	2095	4710	52,0	3.17	0,68	1.50	✓
ML1000-050-C-N	ML1000-050-D-N	50	1.97	180	7.09	130	5.12			1854	4169	2220	4991	64,0	3.90	0,75	1.65	✓
ML1000-063-C-N	ML1000-063-D-N	63	2.48	225	8.86	162	6.38			1708	3839	2010	4519	90,0	5.49	0,88	1.94	✓
ML1000-080-C-N	ML1000-080-D-N	80	3.15	260	10.24	180	7.09	+20 °C +68 °F		1790	4024	2127	4782	107,0	6.53	0,98	2.16	✓

SERVICE BOX

code: 39SKML01000A



Seal (1x)




Washer (4x)



Screw (2x)



Instructions

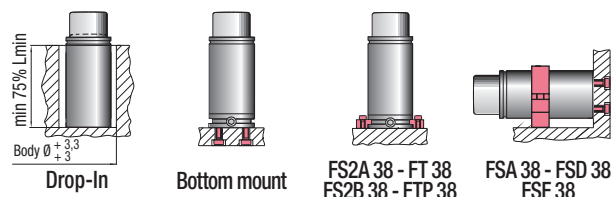
 Sostituire ogni 1.000.000 di cicli. Remplacez à chaque million de cycles.
 Replace every 1 million cycles. Reemplazar cada 1 millón de ciclos.
 Nach 1 Mio. Hübe austauschen. Substituir a cada 1 milhão de ciclos.

HOW TO ORDER

INSTALLATION GUIDELINE
