

RS 350

OSAS + OSM = OVER STROKE
ACTIVE SAFETY + OVER
STROKE MARKER

ACTIVE
SAFETYeasu
MANIFOLD

p. 241



OSAS



USAS



OPAS






 
 
SKUDO

* F_{1i} =Isothermal
end force
at 100% Cu

p. 18


** F_{1p} =Polytropic
end force
at 100% Cu

NOT FOR

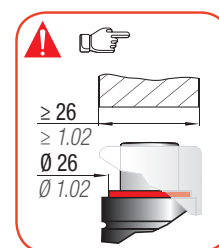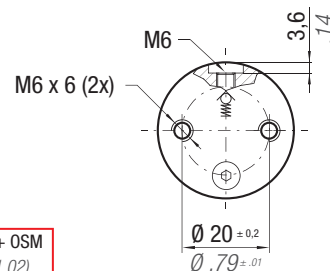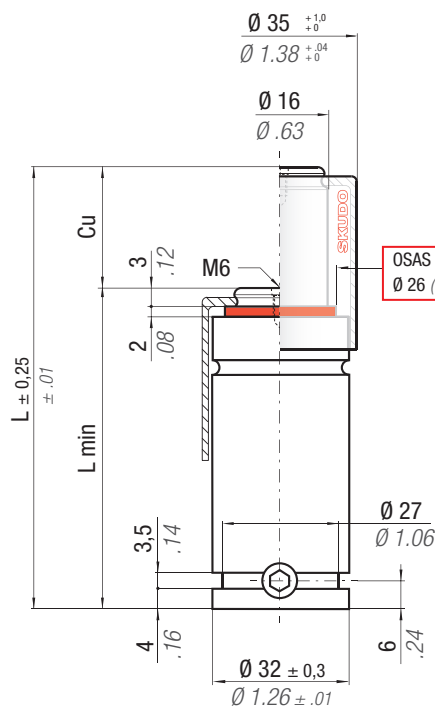

N ₂	°F 32 - 176	°C 0 - 80	ΔP ± 0,33 %/°C	P max 180 bar 2610 psi	P min 20 bar 290 psi	S 2,01 cm ² 0.312 in ²	SPM ~ 20 - 100 (at 20°C)	Max Speed 1,8 m/s	Maintenance kit 39BMRV00350C
----------------	----------------------	--------------------	-------------------	------------------------------	----------------------------	--	--------------------------------	----------------------	---------------------------------

CODE		Cu		L		L min		F ₀	F _{1_i} *	F _{1_p} **	Vo				 2014/68/EU		
		mm	inch	mm	inch	mm	inch	daN	lb	daN	lb	daN	lb	cm³		in³	~Kg
RS 350 - 007 - A		7	0.28	50	1.97	43	1.69	360 809 ± 5%	458	1030	505	1136	8,0	0.49	0,16	0.36	✓
RS 350 - 010 - A		10	0.39	56	2.20	46	1.81		478	1075	533	1199	10,0	0.61	0,17	0.38	✓
RS 350 - 013 - A		13	0.51	62	2.44	49	1.93		493	1109	554	1245	12,0	0.73	0,18	0.40	✓
RS 350 - 016 - A		16	0.63	68	2.68	52	2.05		505	1134	570	1282	14,0	0.85	0,19	0.42	✓
RS 350 - 022 - A		22	0.87	80	3.15	58	2.28		521	1171	593	1333	18,0	1.10	0,21	0.46	✓
RS 350 - 029 - A		29	1.14	94	3.70	65	2.56	180 bar 2610 psi	533	1199	611	1374	22,0	1.34	0,23	0.51	✓
RS 350 - 035 - A		35	1.38	106	4.17	71	2.80		541	1216	622	1399	26,0	1.59	0,25	0.55	✓
RS 350 - 047 - A		47	1.85	130	5.12	83	3.27		552	1240	637	1432	33,0	2.01	0,29	0.63	✓
RS 350 - 060 - A		60	2.36	156	6.14	96	3.78		559	1256	648	1456	41,0	2.50	0,33	0.72	✓
RS 350 - 072 - A		72	2.83	180	7.09	108	4.25		563	1266	654	1471	49,0	2.99	0,36	0.80	✓
RS 350 - 077 - A		77	3.03	190	7.48	113	4.45	+ 20 °C +68 °F	565	1270	657	1476	52,0	3.17	0,38	0.83	✓
RS 350 - 097 - A		97	3.82	230	9.06	133	5.24		570	1281	663	1492	65,0	3.97	0,44	0.96	✓
RS 350 - 122 - A		122	4.80	280	11.02	158	6.22		574	1289	669	1504	80,0	4.88	0,51	1.13	✓

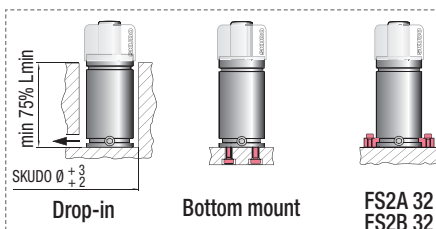WARNING
REMOVE SKUDOUpside down
mounting

HOW TO ORDER



INSTALLATION GUIDELINE

