

JR SEAL BEARING


Special Sizes Available On Request.

Ref.	A	B	C	D	E	F	H	J	K	S
JR.061226	6	12	26	24	8	13	8.5	13	26	5
JR.081529	8	15	29.5	32	8	17	10.5	13	35	7
JR.101942	10	19	42	39	8	21	14	13	41	9
JR.122245	12	22	45	42	10	26	17	13	45	11
JR.162550	16	25	50	47	10	27	22	14	50	15

● Cad Insertion Point



IMPORTANT! Every seal must have a separate exit, do not connect in-line. Do not dry-run the parts.

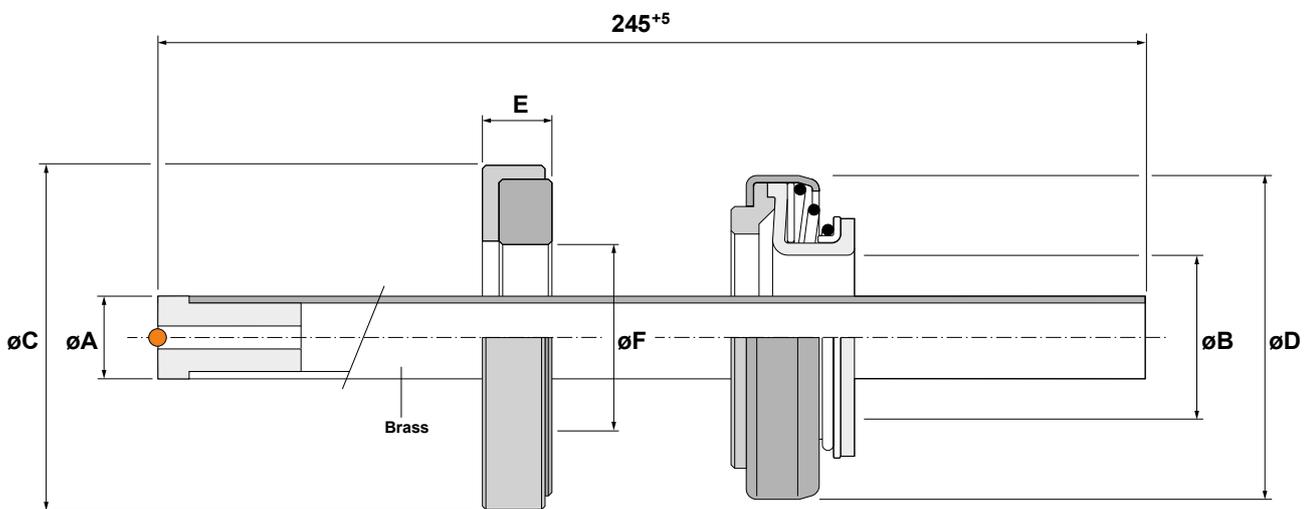

Installation Guidelines

