


Special Sizes Available On Request.

● Cad Insertion Point

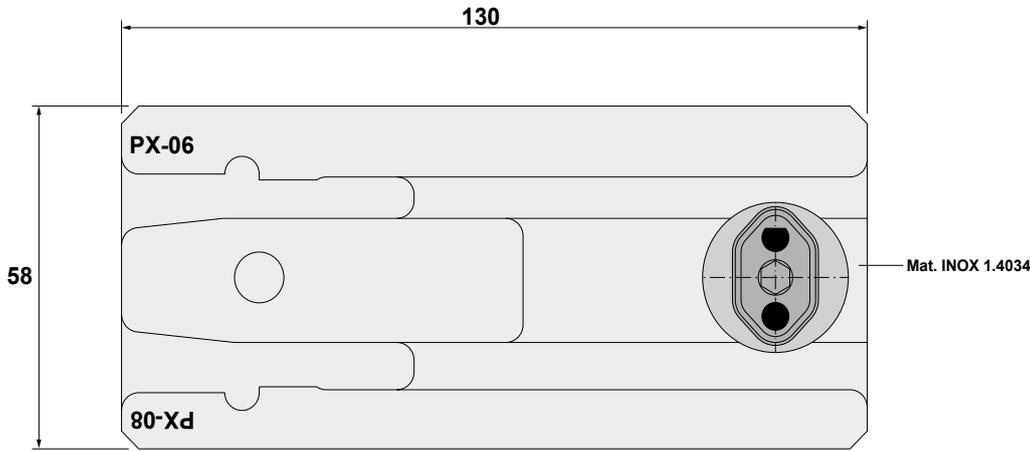

Ref.
CX.013058

Use Guidelines

1. Insert the PX into the corresponding slot, for 6 or 8mm. shank. Ensure that the shape of the PX head is adjusted in the housing support.
2. Use an allen key to select the correct option: flat or round.
3. Cut the PX to the required dimension.

