


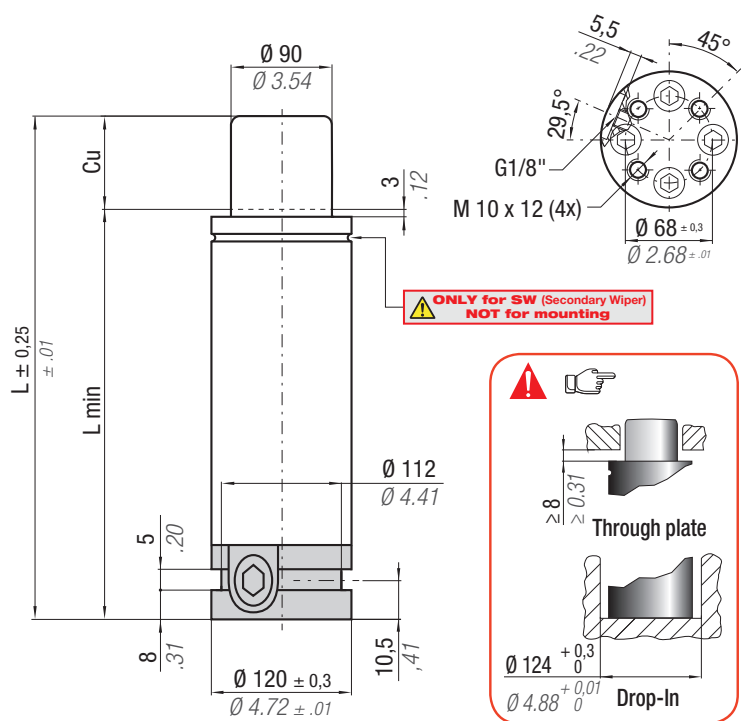

Il nuovo codice sarà fornito solo ad esaurimento del vecchio

The new code will be supplied only when the old will be out of stock

Der neue Kode wird geliefert nur wenn der alte nicht mehr im Lager ist

Le nouveau code sera fourni uniquement lorsque le vieux stock sera écoulé

El nuevo código será suministrado sólo cuando el viejo está fuera de stock

O novo código irá ser fornecido apenas quando o antigo esgotar stock

* $F_{1i} =$

Isothermal end force at 100% Cu

** $F_{1p} =$

Polytrophic end force at 100% Cu



SW

ACTIVE SAFETY



OSAS



USAS



OPAS

 N2		°F 32 176 °C 0 80	ΔP ± 0,33 %/°C	P max 200 bar 2900 psi	P min 20 bar 290 psi	S 63,62 cm² 9.861 in²	SPM ~ 20 - 50 (at 20°C)	Max Speed 1,6 m/s	Maintenance kit 39BMML12000C											
CODE PHASING OUT from 05/2019		 NEW		Cu		L		L min		F0 Initial force		F1i * End force		F1p ** End force		Vo			PED 2014/68/EU	
		mm	inch	mm	inch	mm	inch	mm	inch	daN	lb	daN	lb	daN	lb	cm³	in³	~Kg	~lb	
ML12000-015-C-N	ML12000-015-D-N	15	0.59	135	5.31	120	4.72	12720	28595	± 5%	200 bar 2900 psi	17877	40189	20134	45263	417,0	25.44	7,45	16.42	✓
ML12000-025-C-N	ML12000-025-D-N	25	0.98	155	6.10	130	5.12	20211	45436			20211	45436	23346	52484	534,0	32.57	7,92	17.46	✓
ML12000-038-C-N	ML12000-038-D-N	38	1.50	185	7.28	147	5.79	21787	48979			21787	48979	25558	57457	718,0	43.80	8,64	19.05	✓
ML12000-050-C-N	ML12000-050-D-N	50	1.97	215	8.46	165	6.50	22429	50422			22429	50422	26470	59507	906,0	55.27	9,37	20.66	✓
ML12000-063-C-N	ML12000-063-D-N	63	2.48	245	9.65	182	7.17	23211	52180			23211	52180	27586	62016	1089,0	66.43	10,09	22.24	✓
ML12000-080-C-N	ML12000-080-D-N	80	3.15	285	11.22	205	8.07	+20 °C +68 °F		23860	53639	28520	64116	1335,0	81.44	11,06	24.38	11,06	24.38	✓

SERVICE BOX

code: 39SKML12000A



Seal (1x)



Washer (8x)




Screw (4x)



Instructions



Sostituire ogni 1.000.000 di cicli. Remplacez à chaque million de cycles. Replace every 1 million cycles. Reemplazar cada 1 millón de ciclos. Nach 1 Mio. Hübe austauschen. Substituir a cada 1 milhão de ciclos.

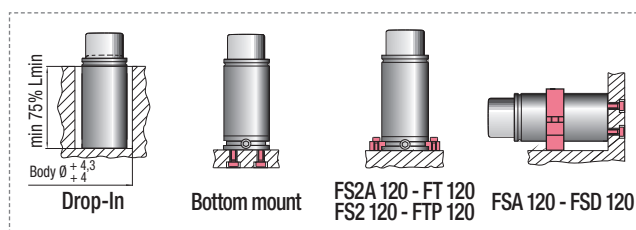

HOW TO ORDER



INSTALLATION GUIDELINE

