

RV 6600

ISO 11901 - 3	VDI 3003 - Blatt 3	B2 4005 (BMW)	075.90.60 (FCA)
W-DX35-6204 (Ford)	B8 3180 220 000 004(MB)	39D 997 (VW)	



OSAS + OSM = OVER STROKE ACTIVE SAFETY + OVER STROKE MARKER

ACTIVE SAFETY

Il nuovo codice sarà fornito solo ad esaurimento del vecchio

The new code will be supplied only when the old will be out of stock

Der neue Kode wird nur angegeben, wenn der alte nicht mehr lieferbar ist

Le nouveau code sera fourni uniquement lorsque le vieux stock sera écolé

El nuevo código será suministrado sólo cuando se agoten las existencias del antiguo

O novo código irá ser fornecido apenas quando o antigo esgotar stock



OSAS



USAS





OPAS

easu p. 247

* F_{1i} = Isothermal end force at 100% Cu p. 16


** F_{1p} = Polytropic end force at 100% Cu

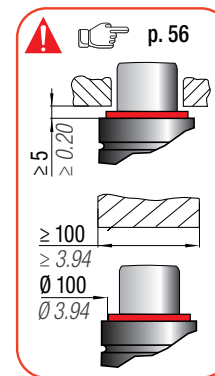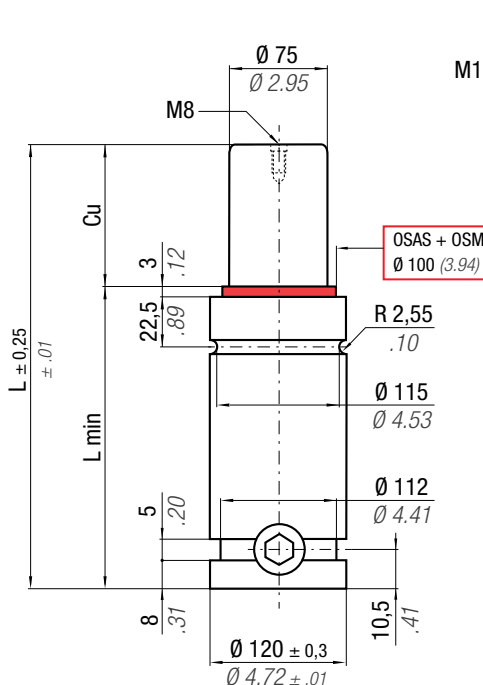

N ₂	0 - 80 °C 32 - 176 °F	ΔP ± 0,33 %/°C	P max 150 bar 2175 psi	P min 20 bar 290 psi	S 44,18 cm ² 6.848 in ²	SPM ~ 20 - 100 (at 20°C)	Max Speed 1,8 m/s 70.8 in/s	Maintenance kit 39BMRV06600C
----------------	--------------------------	---------------------------	------------------------------	----------------------------	---	--------------------------------	-----------------------------------	---------------------------------

CODE	PHASING OUT from 04/2021	NEW	Cu	L	L min	F ₀	F _{1i} *	F _{1p} **	V ₀				
			mm	inch	mm	inch	daN	lb	cm ³	in ³	~Kg	~lb	
RV 6600 - 016 - A	◆ RV 6600 - 016 - B		16	0.63	100	3.94	84	3.31	298	18.19	5,12	11.29	✓
RV 6600 - 019 - A	◆ RV 6600 - 019 - B		19	0.75	106	4.17	87	3.43	330	20.14	5,23	11.53	✓
RV 6600 - 025 - A	RV 6600 - 025 - B		25	0.98	118	4.65	93	3.66	394	24.04	5,47	12.06	✓
RV 6600 - 032 - A	RV 6600 - 032 - B		32	1.26	132	5.20	100	3.94	469	28.62	5,75	12.68	✓
RV 6600 - 038 - A	RV 6600 - 038 - B		38	1.50	144	5.67	106	4.17	533	32.53	5,99	13.21	✓
RV 6600 - 050 - A	RV 6600 - 050 - B		50	1.97	168	6.61	118	4.65	661	40.34	6,47	14.26	✓
RV 6600 - 063 - A	RV 6600 - 063 - B		63	2.48	194	7.64	131	5.16	799	48.76	6,99	15.41	✓
RV 6600 - 075 - A	RV 6600 - 075 - B		75	2.95	218	8.58	143	5.63	927	56.57	7,47	16.47	✓
RV 6600 - 080 - A	RV 6600 - 080 - B		80	3.15	228	8.98	148	5.83	980	59.80	7,67	16.91	✓
RV 6600 - 100 - A	RV 6600 - 100 - B		100	3.94	268	10.55	168	6.61	1193	72.80	8,46	18.65	✓
RV 6600 - 125 - A	RV 6600 - 125 - B		125	4.92	318	12.52	193	7.60	1459	89.03	9,46	20.86	✓

◆ Disposable

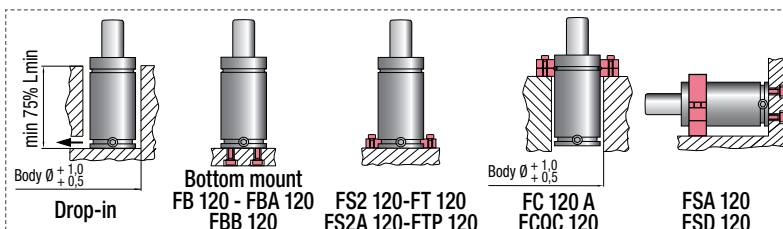

HOW TO ORDER



INSTALLATION GUIDELINE

